

Austin/Morris - Mini - 850 - 1000 - Clubman - Cooper, 1959 -

Brink type : 21

Nr. Typegoedkeuring/Approval number : 0801 0596

Max. massa aanhangwagen/Max. mass trailer : 850 KG

Max. verticale last/Max. vertical load : 50 KG

Massa v.d. trekhaak/Mass of the towbar : 7 KG




Aanhaalmomenten voor bouten/moeren :
Torques for bolts/nuts :

M 6 : 1,2 mkp - 12,1 Nm

M 8 : 2,5 mkp - 24,5 Nm

M 10 : 4,7 mkp - 46,0 Nm

M 12 : 7,5 mkp - 71,5 Nm

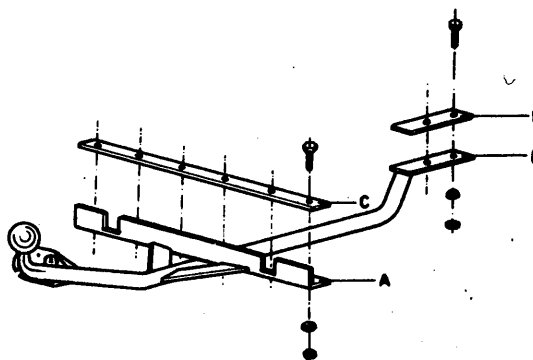

Montagehandleiding:

1. Demonteer de bouten en de contraplaten van de trekhaak.
2. Plaats de trekhaak midden onder de wagen met punt A om de dwarse U-balk en boor de gaten door de onderflens van de balk met een boor van 10,5 mm. Plaats de contraplaat in de balk en bevestig de zes 8.8 bouten M 10 x 30.
3. Boor de gaten in punt B van de trekhaak met een boor van 10,5 mm door de koffervloer. Plaats de contraplaat in de kofferruimte en bevestig twee 8.8 bouten M 10 x 30.

N.B. Deze montagehandleiding dient, i.v.m. het aanbrengen van een trekkinrichting, bij het onderzoek van het voertuig t.b.v. de aanvulling/wijziging van het kentekenbewijs, aan de met het onderzoek belaste ambtenaar van de Rijksdienst voor het Wegverkeer ter inzage te worden overhandigd.

Voor de max. toegestane massa, welke uw wagen mag trekken, dient u uw dealer te raadplegen.

Fitting instructions:

1. Remove all bolts and backingplates from towbar.
2. Place towbar under car (measure from both sides) with point A round U-shaped crossmember and drill holes through bottomflange of member using a 10,5 mm drill. Place backingplate in member and fasten using six bolts M 10 x 30.
3. Drill holes in point B of towbar through bootbottom using a 10,5 mm drill. Place backingplate in boot and fasten using two bolts M 10 x 30.

Note: Please, consult your car dealer for the max. tow mass allowance.